

**AN-X-AB-DHRIO
Data Highway Plus
Communication**

User Manual



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Because of the variety of uses for the products described in this publication, those responsible for the application and use of these products must satisfy themselves that all necessary steps have been taken to assure that each application and use meets all performance and safety requirements, including any applicable laws, regulations, codes and standards. In no event will Quest Technical Solutions be responsible or liable for indirect or consequential damage resulting from the use or application of these products.

Any illustrations, charts, sample programs, and layout examples shown in this publication are intended solely for purposes of example. Since there are many variables and requirements associated with any particular installation, Quest Technical Solutions does not assume responsibility or liability (to include intellectual property liability) for actual use based upon the examples shown in this publication.

Throughout this manual we use notes to make you aware of safety considerations.

Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss.

These warnings help to:

WARNING!

- identify a hazard
- avoid the hazard
- recognize the consequences

IMPORTANT!

Identifies information that is especially important for successful application and understanding of the product.

TIP

Identifies information that explains the best way to use the AN-X-AB-DHRIO (DH+)

Microsoft is a registered trademark of Microsoft Corporation.

Windows, Windows XP Windows Vista and Windows 7 are trademarks of Microsoft Corporation.

ControlLogix, RSLinx and RSLogix 5000 are trademarks of the Allen-Bradley Company, Inc.



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



AN-X-AB-DHRIO DATA HIGHWAY PLUS OVERVIEW	2
Hardware Features	3
Package Contents	3
Modes of Operation	4
INSTALLATION	5
Prevent Electrostatic Discharge	5
Power	5
Data Highway Plus Cabling and Termination	5
Ethernet Cabling	6
Software Installation	6
BASIC CONFIGURATION	7
Ethernet Configuration	7
Example: Standalone Computer	11
Reconfiguring an AN-X from an Unknown State	15
Data Highway Plus Configuration	16
USING PROGRAMMING SOFTWARE	17
Configuring the AN-X-AB-DHRIO (DH+) in RSLinx	17
Using the Programming Software	19
Multiple Programmer Access	19
USING DDE/OPC AND UNSCHEDULED MESSAGES	20
Sending Messages	20
USING ANXINIT	21
AnxInit Log	21
Locating Available AN-X Modules	22

Selecting an AN-X	23
Set AN-X IP Configuration	24
Restart an AN-X	25
AN-X Info	25
Read Kernel Parameters	26
Run Config Mode	26
Update AN-X Flash	26
Update Firmware	27
Firmware Update Wizard	27
Update Firmware Command	31
Patch Firmware	31
USING THE WEB INTERFACE	33
Data Highway Plus Configuration	34
Monitor Diagnostic Counters	35
Log Files	36
System Error Log	36
Ethernet/IP Log	36
System Info Log	36
View All Logs	36
Administration Menu	36
TROUBLESHOOTING	37
LEDs	37
Ethernet LEDs	37
SYS LED	37
NET LED – Network Status	38
Data Highway Plus Diagnostic Counters	38
UPDATING THE FIRMWARE	41
Reading Version Numbers	41
SPECIFICATIONS	42



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com




SUPPORT

43

WARRANTY

44

AN-X-AB-DHRIO Data Highway Plus Overview

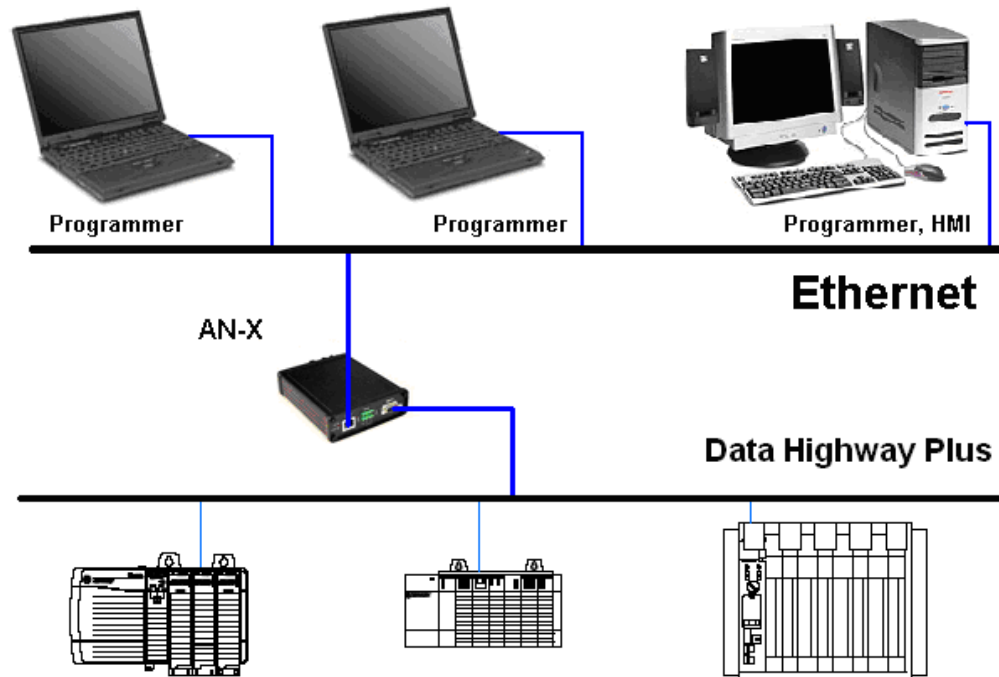

The AN-X-AB-DHRIO module running Data Highway Plus (DH+) firmware connects a computer or other device to an Allen-Bradley Data Highway Plus network, using Ethernet.

The AN-X-AB-DHRIO (DH+) module:

- can act as any valid Data Highway Plus station number, from 0 to 77 octal
- supports all Data Highway Plus baud rates, 57.6, 115.2 and 230.4 Kbaud
- maintains Data Highway Plus diagnostic counters

You can use the AN-X-AB-DHRIO (DH+) module with Rockwell programming software to communicate with PLCs such as the PLC-5 or ControlLogix over Data Highway Plus. Refer to page 17 for details.

You can use a DDE or OPC server such as RSLinx to access Data Highway Plus using the AN-X-AB-DHRIO (DH+). Refer to page 20 for details.

The AN-X-AB-DHRIO (DH+) module has a web interface for configuration of Data Highway Plus station number and baud rate and for monitoring diagnostic counters and the active station list. You can communicate with the module using any standard web browser such as Internet Explorer.

A watchdog timer is implemented in the module's hardware. If the firmware does not kick the watchdog within the timeout period the watchdog times out and places the module into a safe fatal failure state.

A jabber inhibit timer is implemented in the module's hardware. If the network transmitter is on longer than 150% of the longest network frame time, the transmitter is forced off and the module is placed into a safe fatal failure state.

The module firmware can be updated over Ethernet using the Windows utility supplied. Refer to page 41 for details.

Hardware Features



The module has:

- LEDs to indicate the status of the connection to the Ethernet, its own internal state, and the connection to the Data Highway Plus network
- an Ethernet connector
- a Phoenix connector to connect to the Data Highway Plus network
- a power connector

Package Contents

- AN-X-AB-DHRIO (DH+) module
- CD containing software and documentation



Modes of Operation

There are three AN-X modes of operation:

- Boot mode. The AN-X is running its low level startup firmware.
- Configuration mode. This is the mode when you are updating the firmware in the AN-X.
- Production mode. This is the normal runtime mode of operation.



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Installation

Prevent Electrostatic Discharge

The module is sensitive to electrostatic discharge.


Electrostatic discharge can damage integrated circuits or semiconductors. Follow these guidelines when you handle the module:

WARNING!

- Touch a grounded object to discharge static potential
- Do not touch the connector pins

Power

AN-X requires DC power input of anywhere from 12 to 24 VDC

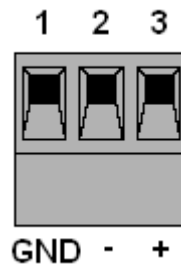

Left to right the pins on the power connector are chassis ground, negative voltage and positive voltage.

The chassis ground should be connected.

Power consumption internally is 300 mA @ 12VDC or 150 mA @ 24VDC.

The part number for the power connector is Phoenix MSTB 2.5/3-ST-5.08

Data Highway Plus Cabling and Termination

Follow Allen-Bradley cabling recommendations for Data Highway Plus. Refer to Approved Vendor List for DH, DH+, DH-485, and Remote I/O Cables, publication ICCG-2.2, February 1996.

The network cable must be terminated with terminating loads attached to the physical ends of the network, usually 82 ohm, but refer to Allen-Bradley documentation since some devices require 150 ohm terminators. There should be two and only two terminators on the Data Highway Plus network.



From left to right on the AN-X module, the Data Highway Plus connections should be line 1, shield, line 2.



The part number for the connector is Phoenix MSTB 2.5/3-ST-5.08

Ethernet Cabling

AN-X has a standard RJ-45 connector for connecting to Ethernet.

If you are connecting AN-X to an existing network through a router or switch, use a standard Ethernet cable.

If you are connecting directly between a computer and AN-X, use a crossover cable.

Software Installation

You must uninstall any previous version of the software before you can install a new version. Use the Windows Control Panel Add and Remove Programs to remove the old version.

Insert the CD supplied with the AN-X module and run the program setup.exe on the CD.



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Basic Configuration

The AN-X-AB-DHRIO (DH+) module connects a computer or other device on Ethernet to a Data Highway Plus network.


Before you can use the AN-X-AB-DHRIO (DH+), you must configure its network properties, first on Ethernet and then on Data Highway Plus.

Ethernet Configuration

AN-X can be configured to use a static (unchanging) IP address or it can be configured to obtain its IP address from a DHCP server.

Unless you have control of the DHCP server, in most applications you will want to configure AN-X to use a static IP address. Otherwise the DHCP server may assign a different IP address each time AN-X powers up, and any software that accesses the AN-X module would have to be reconfigured.

AN-X is shipped with DHCP enabled. If it finds a DHCP server on the network, the DHCP server assigns it an IP address. You can use the utility AnxInit to find the IP address that the DHCP server has assigned. Select *Utilities/Locate All AN-X Modules* and AnxInit will locate the AN-X and display its IP address.

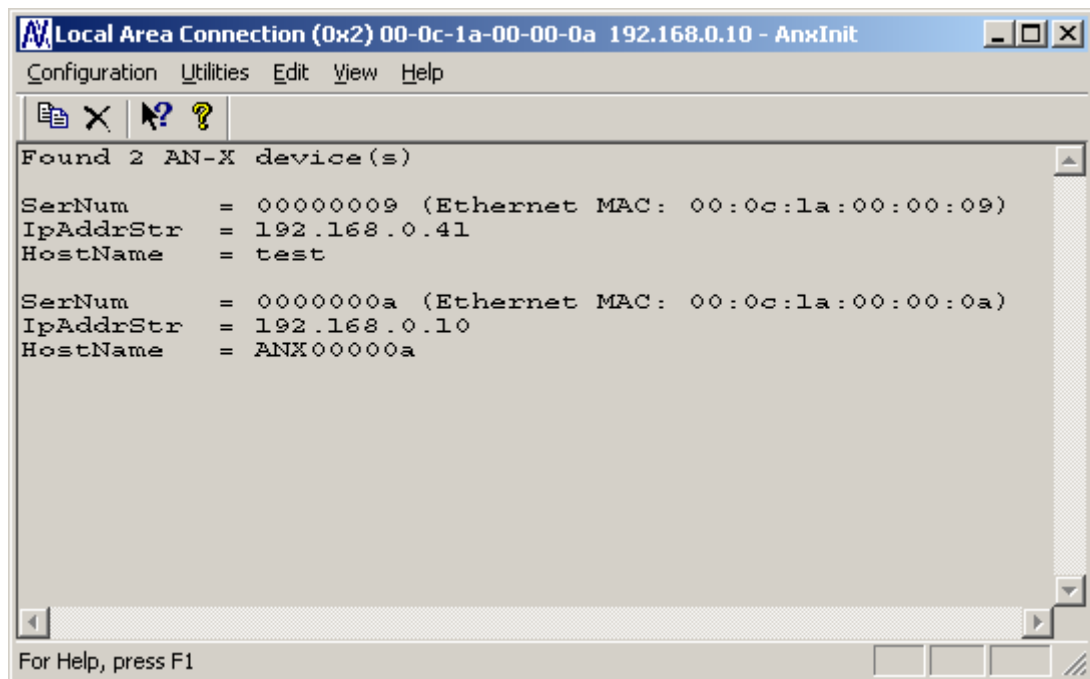

The screenshot shows a Windows-style window titled "Local Area Connection (0x2) 00-0c-1a-00-00-0a 192.168.0.10 - AnxInit". The window contains a text-based interface with a menu bar (Configuration, Utilities, Edit, View, Help) and a toolbar. The main content area displays the following text:

```

Found 2 AN-X device(s)

SerNum      = 00000009 (Ethernet MAC: 00:0c:1a:00:00:09)
IpAddrStr   = 192.168.0.41
HostName    = test

SerNum      = 0000000a (Ethernet MAC: 00:0c:1a:00:00:0a)
IpAddrStr   = 192.168.0.10
HostName    = ANX00000a
  
```

At the bottom of the window, it says "For Help, press F1".

If AN-X does not find a DHCP server within about three minutes of starting up, it reverts to a temporary static IP address of 192.168.0.41. If AN-X is using this temporary IP address, it repeatedly flashes the SYS LED three times followed by a pause.



IMPORTANT!

Use this temporary IP address only for initial setup of AN-X. AN-X will not function for its intended purpose at the temporary IP address.

If you are using multiple AN-X modules, configure one at a time, especially if there is no DHCP server on the network, since they will all revert to the same temporary IP address when they fail to find a DHCP server.

IMPORTANT!

If you are connecting AN-X to an existing Ethernet network, consult the network administrator to obtain information about how you should configure AN-X and to obtain a static IP address for AN-X.

IMPORTANT!

The AN-X must be on the local Ethernet (same subnet) when you set its IP address.

You configure the Ethernet properties using the Windows utility AnxInit supplied with AN-X.

Use the *Configuration/AN-X IP Settings* command to start the AN-X IP configuration wizard, which takes you step by step through the IP configuration process.

Step 1

In step 1, you identify the AN-X you are configuring.

Step 1: AN-X Selection

Select this computer's Ethernet adapter that's on the same Ethernet subnet as the AN-X module you want to configure (you may only have one Ethernet adapter in your computer)

Local Area Connection

Enter the Ethernet MAC Address of the AN-X module you want to configure. You can get this from the label on the AN-X module or by selecting Utilities/Locate All AN-X Modules (if the module's current IP address is on the same subnet).

00-0c-1a-00-00-09

Enter the IP address on the local subnet that you intend the AN-X module to use.

192 . 168 . 0 . 9

Next >> Exit

1. Select the Ethernet adapter that's connected to the AN-X. In most cases there will be just one Ethernet adapter in the computer. The AN-X must be on the same subnet as the computer.


2. Enter the MAC address of the AN-X you are configuring. This is printed on the AN-X label. It consists of six pairs of hexadecimal digits, separated by hyphens. In the example above, it's 00-0c-1a-00-00-09.

If the AN-X is already online, you can obtain its MAC address using the *Utilities/Locate All AN-X Modules* command.

3. Enter the IP address you intend the AN-X to use.

Step 2

In step 2, you choose a method of restarting AN-X to put it in boot mode.

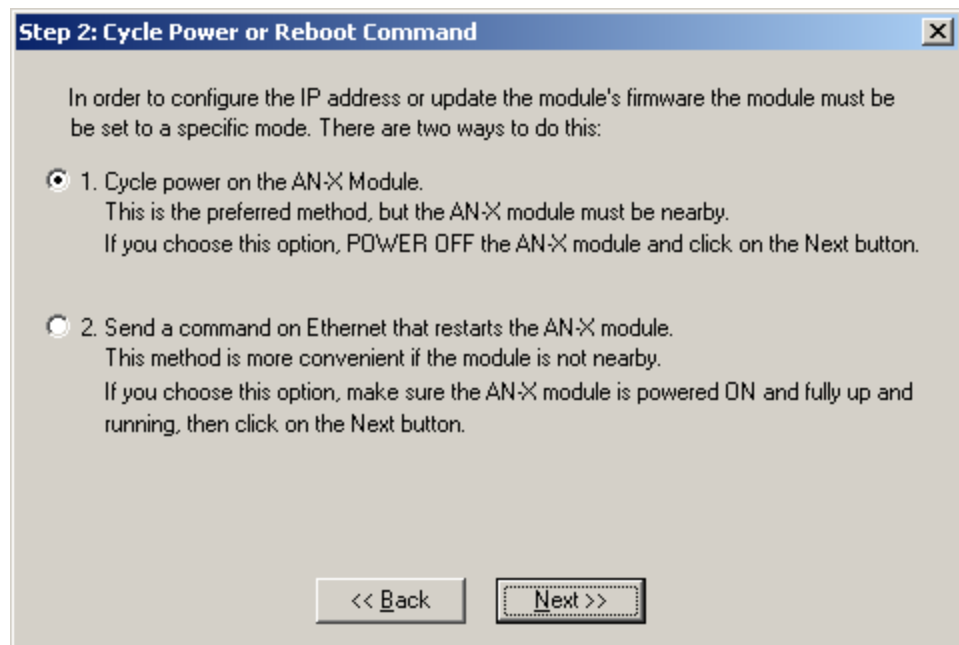


The preferred method is to cycle power on the AN-X. Select the first option on the screen and click the *Next >>* button.

The second method, useful if the AN-X is not easily accessible, is to send it a command over Ethernet. The AN-X must be powered on and completely running for this method to work. For example, if this is the first time you are configuring a new AN-X, allow sufficient time for it to acquire an IP address from a DHCP server or to time out and use its default IP address (about 3 minutes). Select the second option on the screen and click the *Next >>* button.


Step 3:

Wait for AN-X to enter boot mode. While AnxInit is waiting, the *Next*>> button will be disabled. When AN-X is in boot mode, the *Next*>> button will be enabled.

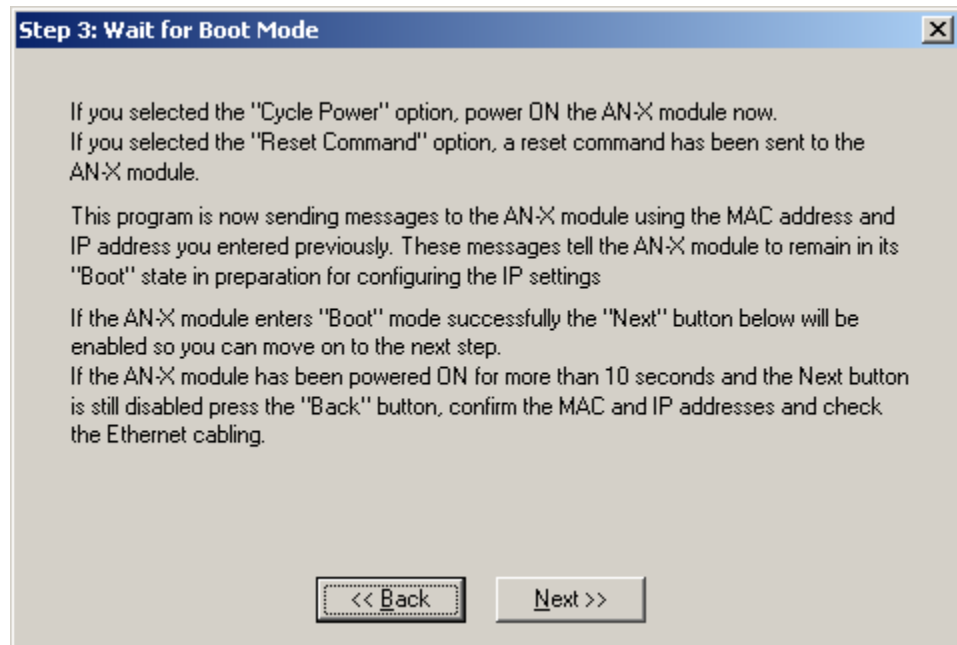

If the AN-X does not enter boot mode within about 10 seconds, return to the previous screens and check the entries.

The AN-X TCP/IP Configuration dialog appears.

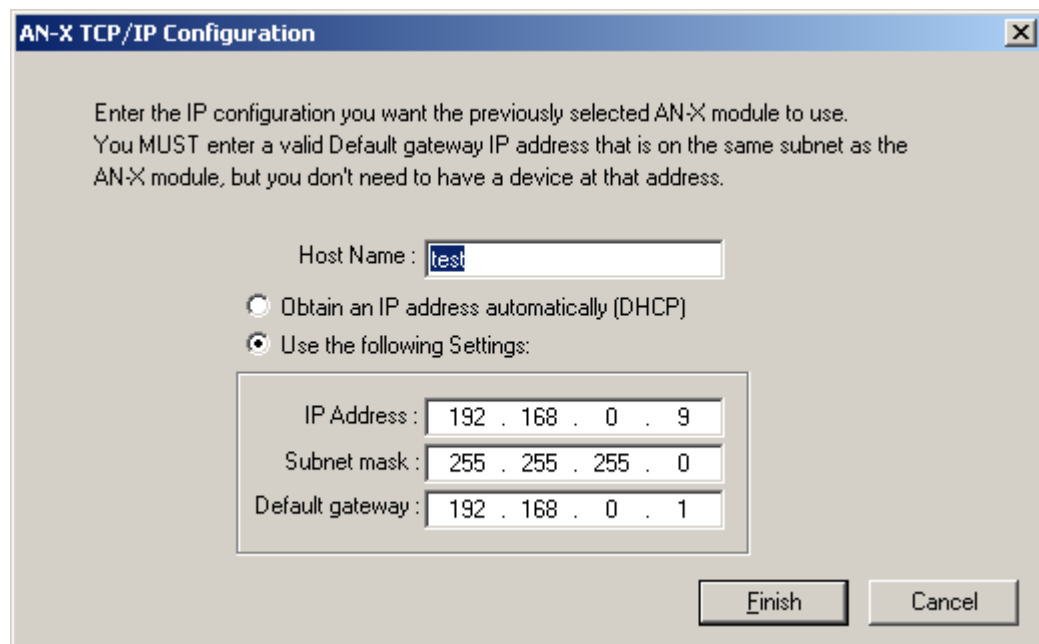

Enter a *Host Name* for the AN-X. This name is used internally by AN-X and may be used to identify the AN-X if you have a DNS server on your network. The name can be from 1 to 31 characters long.

To configure the AN-X to obtain its IP address from a DHCP server on the network, select *Obtain an IP address automatically (DHCP)*

To configure the AN-X to use a static IP address, select *Use the following Settings* and enter:

- the desired IP address for the AN-X.
- the Subnet mask for the AN-X
- the default gateway for your network.

You must enter a valid default gateway address even if there is no device at the gateway address on the network.

Click OK to complete the configuration.

If you Cancel the *Configuration/AN-X IP Settings* command, AN-X is left running the boot code. Use the *Utilities/Restart AN-X* command to restart the AN-X.

Example: Standalone Computer

A typical example is a laptop computer running programming software and connecting directly to an AN-X to program a PLC.

Since you are connecting directly from the computer to AN-X, use a crossover Ethernet cable.


The following instructions assume Windows 2000. The procedure for Windows NT and Windows XP is very similar. They also assume that an Ethernet network card has been installed in the computer and that AnxInit has been installed on the computer.

TIP

The parameters in this example will work when you set up any standalone computer to work with AN-X.


First configure the computer to use a static IP address. From the Start menu, select *Start/Settings/Network and Dialup Connections*. Double click on *Local Area Connection*.



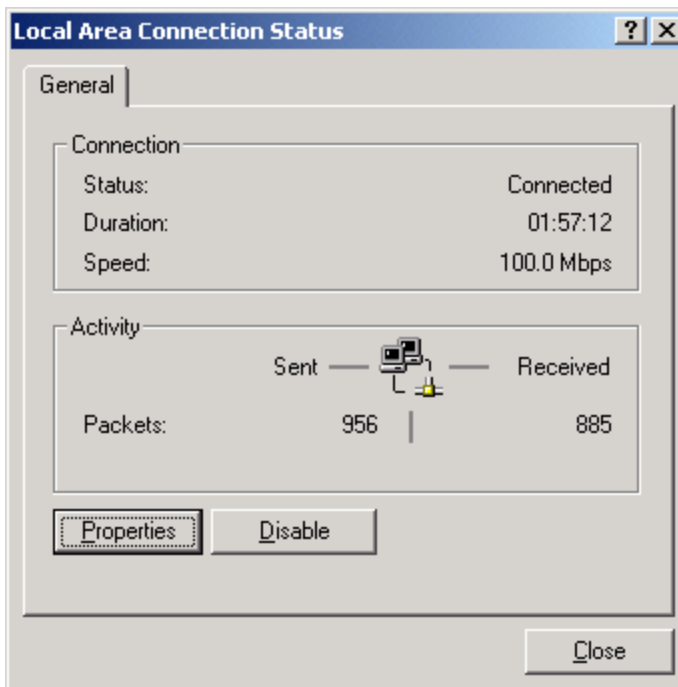

Click the *Properties* button.

Double click on *Internet Protocol (TCP/IP)*.

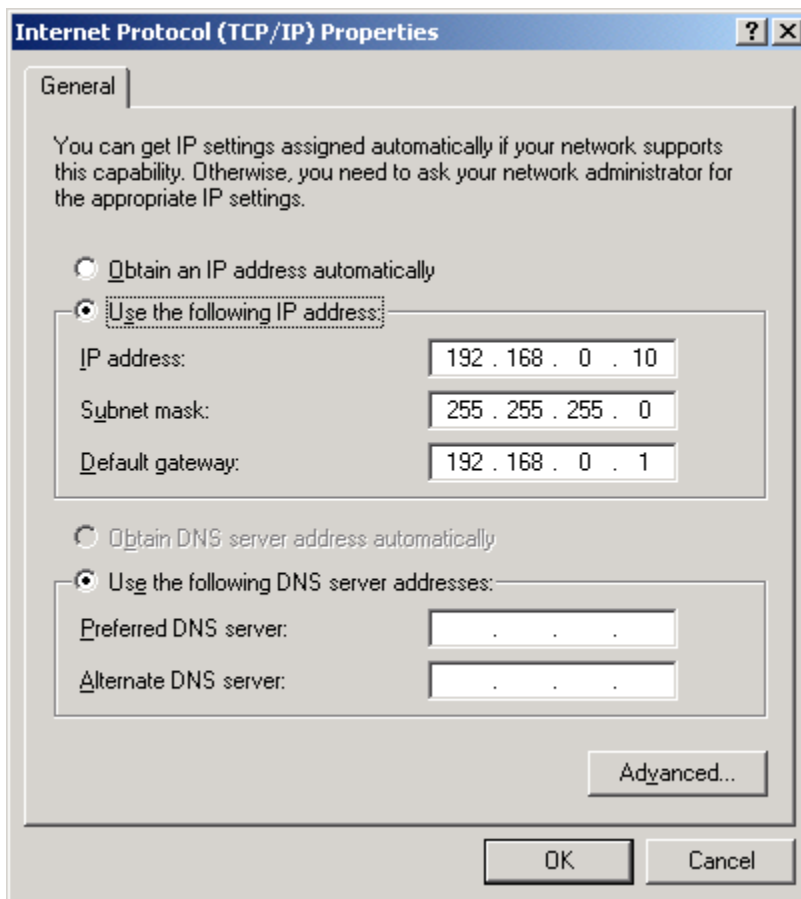

In this example, we will assign the computer an IP address of 192.168.0.10

Set the Subnet mask to 255.255.255.0 (standard mask for the Class C network address of 192.168.0.x).

Set the Default gateway to 192.168.0.1 (this address does not exist on the Ethernet network but AN-X requires a valid default gateway entry).


Click OK to accept the settings

Connect the computer to AN-X using the crossover cable.


If this is the first time you have used the AN-X module, it will look for a DHCP server on the network. It waits about three minutes, then reverts to a default IP address of 192.168.0.41

Power up the AN-X and wait for the search for a DHCP server to time out. When the search for a DHCP server times out, AN-X will flash the SYS LED red three times followed by a pause repeatedly.

Run AnxInit. Select *Utilities/Locate All AN-X Modules* and confirm that the AN-X is found.

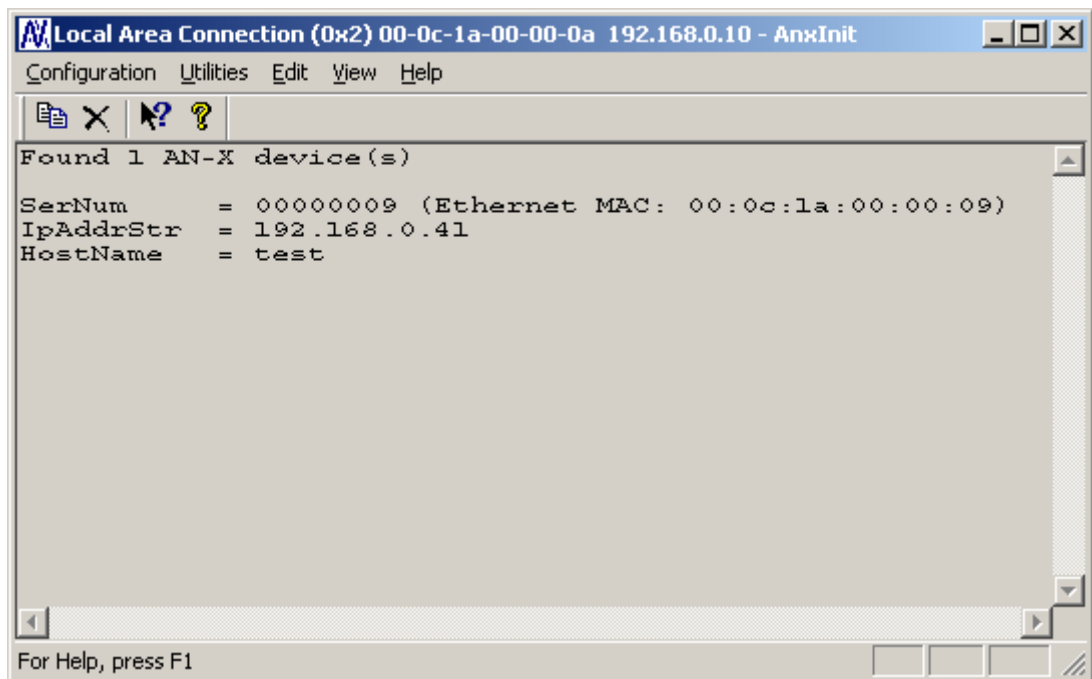


Select *Utilities/Select An AN-X* and enter the MAC Address and IP address.

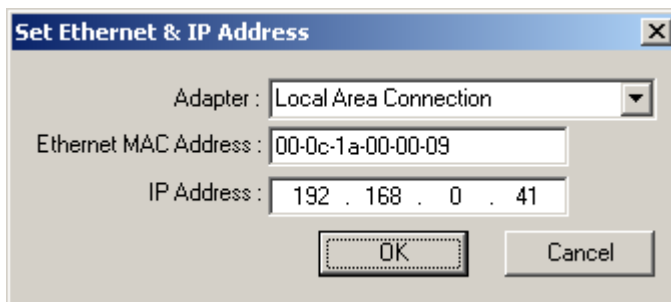

The dialog box titled "Set Ethernet & IP Address" has a close button (X) in the top right corner. It contains three input fields: "Adapter:" with a dropdown menu showing "Local Area Connection"; "Ethernet MAC Address:" with the value "00-0c-1a-00-00-09"; and "IP Address:" with the value "192 . 168 . 0 . 41". At the bottom are "OK" and "Cancel" buttons.

Click *OK* to accept the setting.

Select *Utilities/AN-X IP Configuration*.

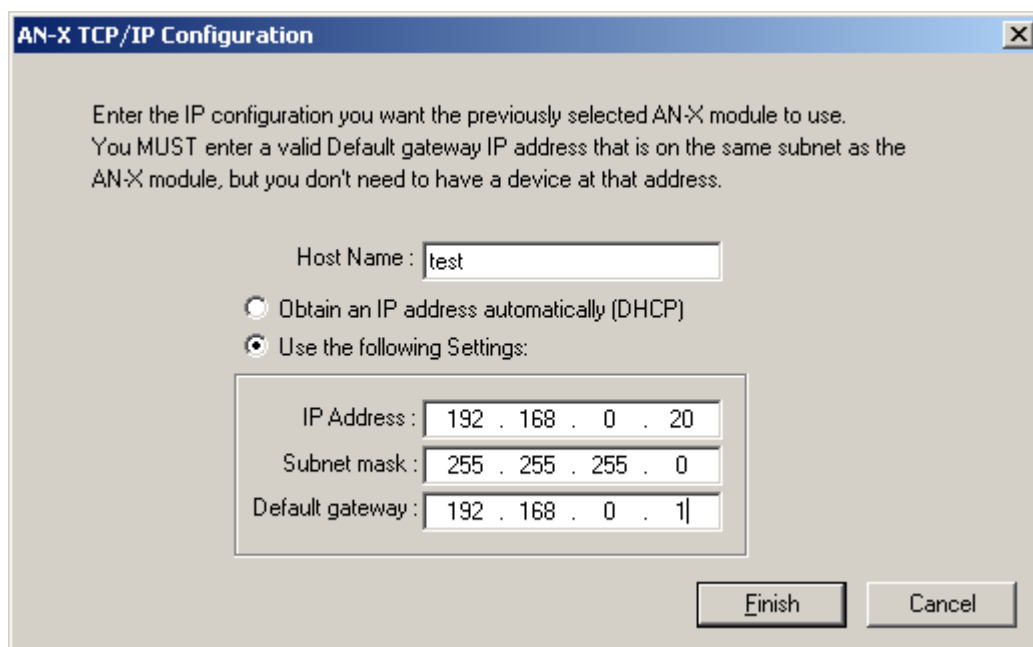

The dialog box titled "AN-X TCP/IP Configuration" has a close button (X) in the top right corner. It contains instructional text: "Enter the IP configuration you want the previously selected AN-X module to use. You MUST enter a valid Default gateway IP address that is on the same subnet as the AN-X module, but you don't need to have a device at that address." Below the text is a "Host Name:" field with the value "test". There are two radio buttons: "Obtain an IP address automatically (DHCP)" (unselected) and "Use the following Settings:" (selected). Below the radio buttons is a group box containing three input fields: "IP Address:" with "192 . 168 . 0 . 20", "Subnet mask:" with "255 . 255 . 255 . 0", and "Default gateway:" with "192 . 168 . 0 . 1". At the bottom right are "Finish" and "Cancel" buttons.


Enter an IP Address. In this case we chose 192.168.0.20

Enter the same Subnet mask and Default gateway that you entered for the computer. The default gateway address does not exist on the network but AN-X requires that the field have a valid entry.

Click *Finish* to accept the settings.

Select *Utilities/Restart AN-X* to restart AN-X with the new parameters.

When the AN-X has restarted (SYS LED is solid green), select *Utilities/Locate All AN-X Modules* and confirm that the AN-X is found with the new parameters.

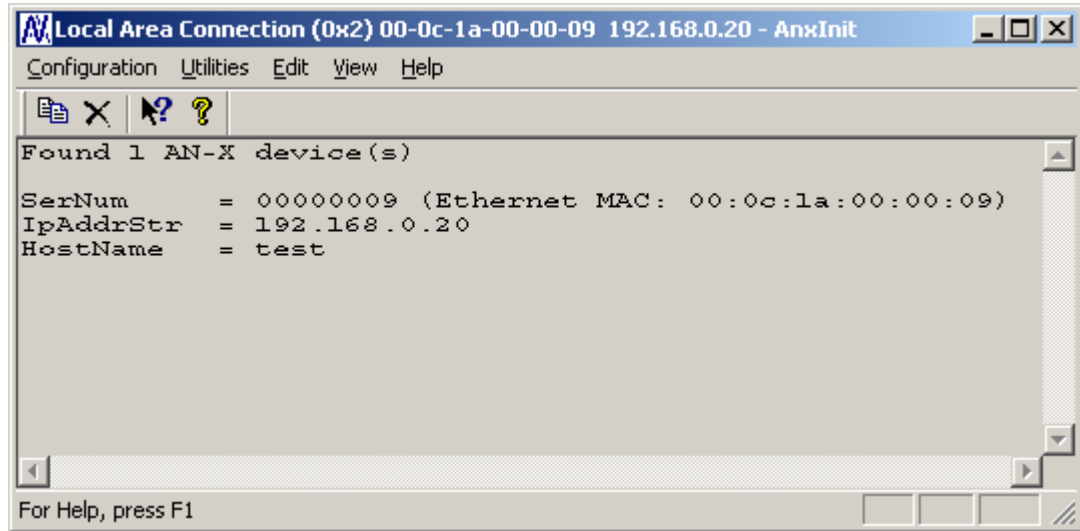

Reconfiguring an AN-X from an Unknown State

It sometimes happens that an AN-X has been previously configured with an IP address that causes it to be inaccessible on the current Ethernet network. To reconfigure it to a known state, run the command *Configuration/AN-X IP Settings* to start the AN-X IP Configuration Wizard and reconfigure AN-X.



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com




Data Highway Plus Configuration

You set the AN-X station number and baud rate using the web interface.

Start your web browser and enter the AN-X IP address as the web address.

Enter the Data Highway Plus station number, in octal.

Select the baud rate.

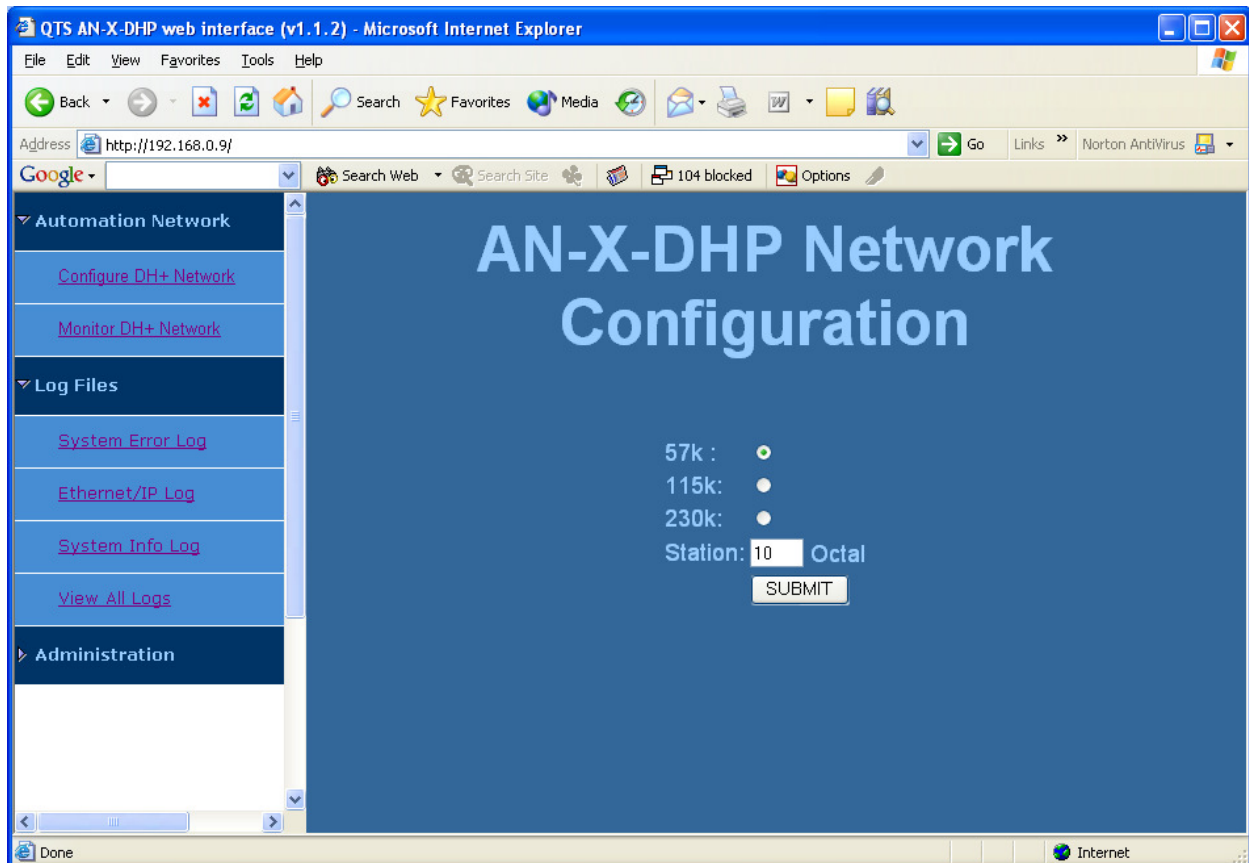

Click the SUBMIT button to send the values to AN-X.

AN-X defaults to a station address of 20 octal and a baud rate of 57.6 Kbaud.

Using Programming Software

Configuring the AN-X-AB-DHRIO (DH+) in RSLinx


To use an AN-X-AB-DHRIO (DH+) module with Rockwell programming software such as RSLogix 5, you must first configure a driver in RSLinx to access the AN-X module.

The following instructions assume that:


- AN-X has been configured and is active on the Ethernet network
- AN-X has been connected to the Data Highway Plus network
- the AN-X Data Highway Plus station number and baud rate have been assigned and are compatible with the existing network

Use the following steps to configure the AN-X-AB-DHRIO (DH+) in RSLinx.


1. Select *Communications/Configure Drivers...*
2. From the list of *Available Driver Types:*, select *Remote Devices via Linx Gateway* and click *Add New...*
3. Give the driver a name

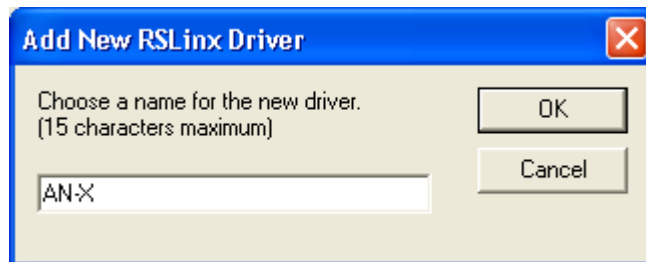

4. For Server's IP Address or hostname: enter the IP address of the AN-X-AB-DHRIO (DH+) and click OK.

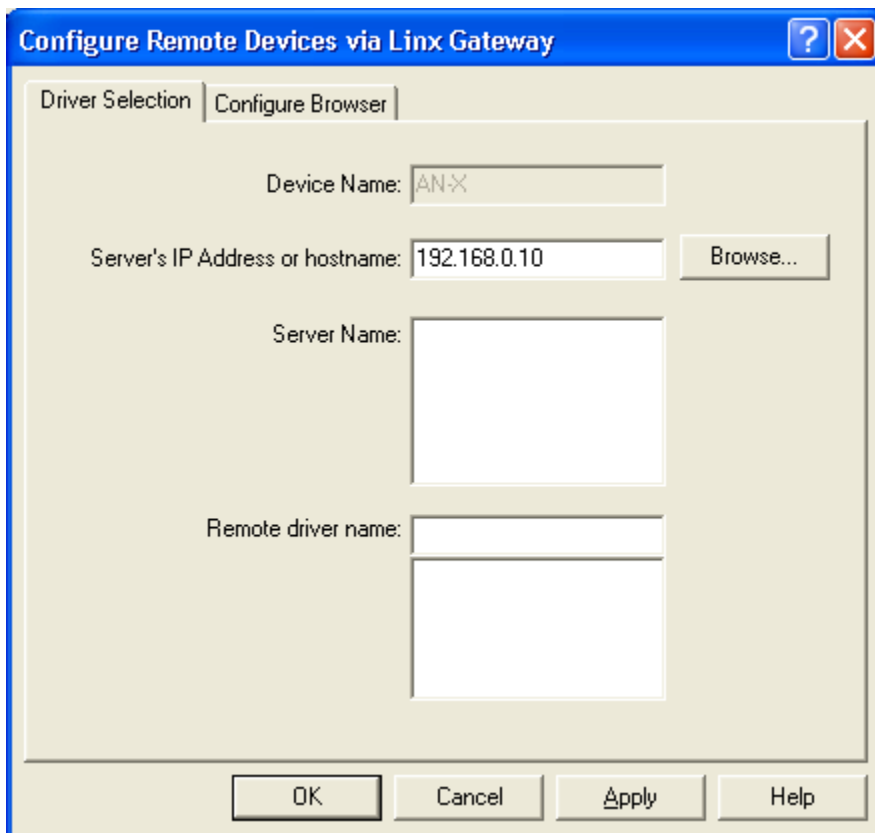

5. Check that the driver has status Running

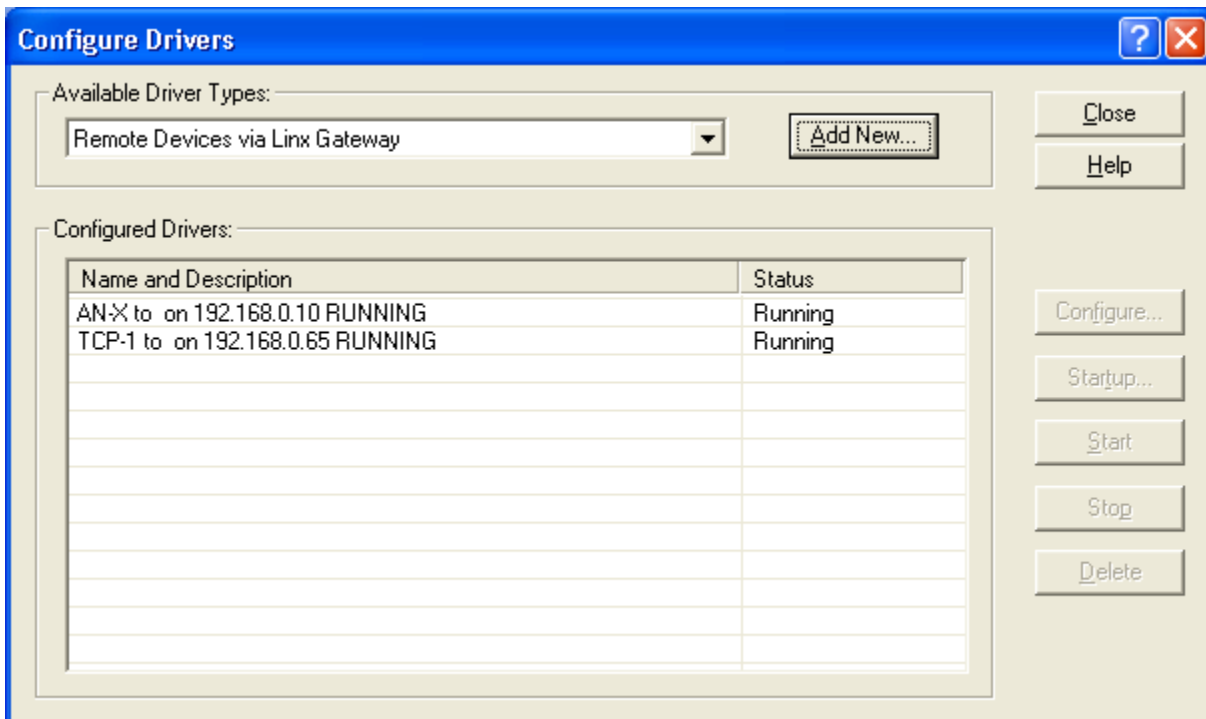

6. Click Close



Using the Programming Software

To go online with programming software such as RSLogix 5, browse the network and go online.

Multiple Programmer Access

Multiple computers can connect to a Data Highway Plus network through a single AN-X-AB-DHRIO (DH+).

Multiple applications on a computer can connect to a Data Highway Plus network through the same AN-X-AB-DHRIO (DH+).



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Using DDE/OPC and Unscheduled Messages

You can use a DDE or OPC server, such as RSLinx, to access data using the AN-X-AB-DHRIO (DH+).

Configure the AN-X module as you would a ControlLogix 1756-ENET Ethernet module and 1756-DHRIO Data Highway Plus module.

From the Ethernet side, the AN-X-AB-DHRIO (DH+) looks like a 4 slot ControlLogix rack with an ENET module in slot 0 and a DH/RIO in slot 1.

Example: RSLinx

To configure a topic in RSLinx to access data on the AN-X-AB-DHRIO (DH+):

1. Create a new topic. From the main menu select *DDE/OPC/Topic Configuration*. Click New and give the topic a name.
2. For the *Data source*, browse the path to the AN-X module and click Apply.
3. On the Data Collection tab, set the *Processor Type* to PLC-5. Check *Polled Messages* and select an appropriate update rate. Leave everything else unchecked. Click Apply
4. You do not need to set anything on the Advanced Communication tab.
5. Click Done to complete the topic configuration.

You should now be able to access data using any DDE or OPC client capable of communicating with RSLinx.

Sending Messages

You can send messages from devices such as a ControlLogix to destinations on Data Highway Plus using MSG instructions. For example, you can send messages to read or write data on a PLC-5.

You cannot initiate messages from the Data Highway Plus side.



Using AnxInit

AnxInit is a Windows application supplied with AN-X to perform the following functions:

- Locate and identify AN-X modules on the Ethernet network
- Select a specific AN-X for configuration
- Set the IP address and other network parameters for an AN-X
- Restart an AN-X
- Display information about the selected AN-X
- Read the kernel parameters for the selected AN-X
- Update the flash (low level firmware) on the selected AN-X
- Update the firmware on the selected AN-X
- Patch the firmware on the selected AN-X

In addition, it can be used to:

- clear the AnxInit log
- copy the contents of the log to the clipboard for use by another application. This is often useful for technical support


AnxInit Log

AnxInit logs messages in its main window. These messages are often useful for determining the cause of errors or for technical support.

To clear the log, select *Edit/ClearLog*.

To copy the contents of the Log to the Windows clipboard so that they can be pasted into another application, select *Edit/Copy*.



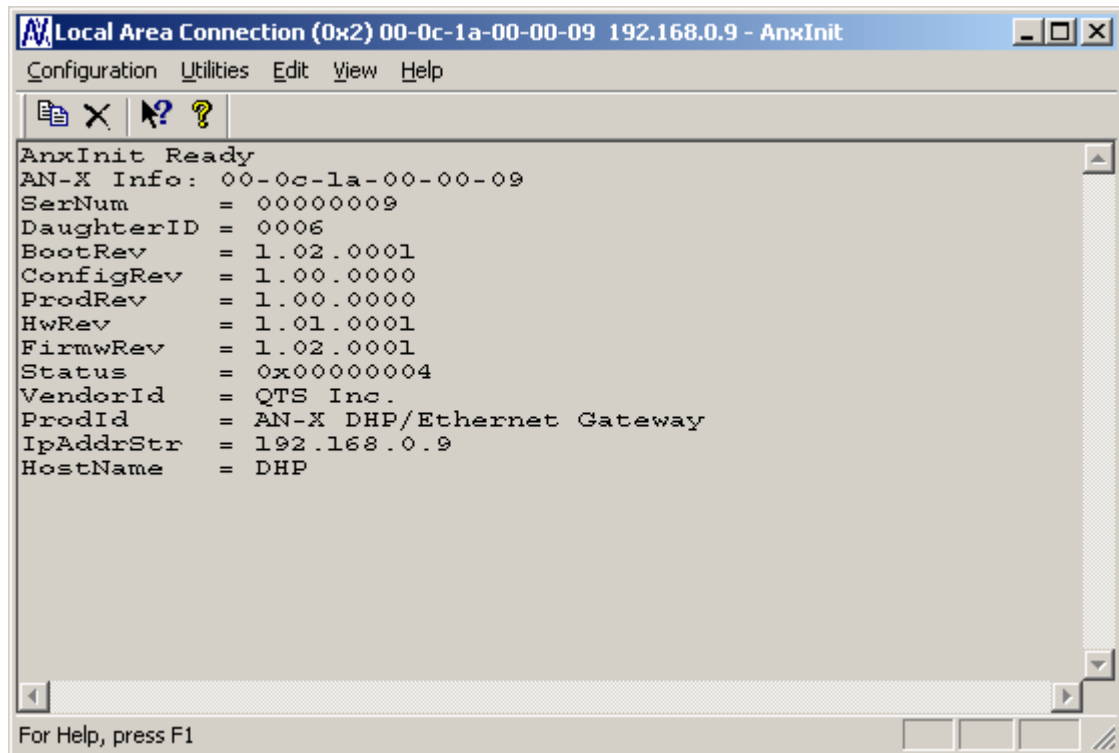

```
Local Area Connection (0x2) 00-0c-1a-00-00-09 192.168.0.9 - AnxInit
Configuration Utilities Edit View Help
AnxInit Ready
AN-X Info: 00-0c-1a-00-00-09
SerNum      = 00000009
DaughterID  = 0006
BootRev     = 1.02.0001
ConfigRev   = 1.00.0000
ProdRev     = 1.00.0000
HwRev       = 1.01.0001
FirmwRev    = 1.02.0001
Status      = 0x00000004
VendorId    = QTS Inc.
ProdId      = AN-X DHP/Ethernet Gateway
IpAddrStr   = 192.168.0.9
HostName    = DHP
For Help, press F1
```

AN-X Log

Locating Available AN-X Modules

To locate all accessible AN-X modules on the Ethernet network, select *Utilities/Locate All AN-X Modules*.

AnxInit displays a list of the AN-X modules it finds, showing their MAC IDs, IP addresses and host names.


This command is useful for determining IP addresses when they have been set by a DHCP server or for confirming that an AN-X is accessible.



A product of Quest Technical Solutions


Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



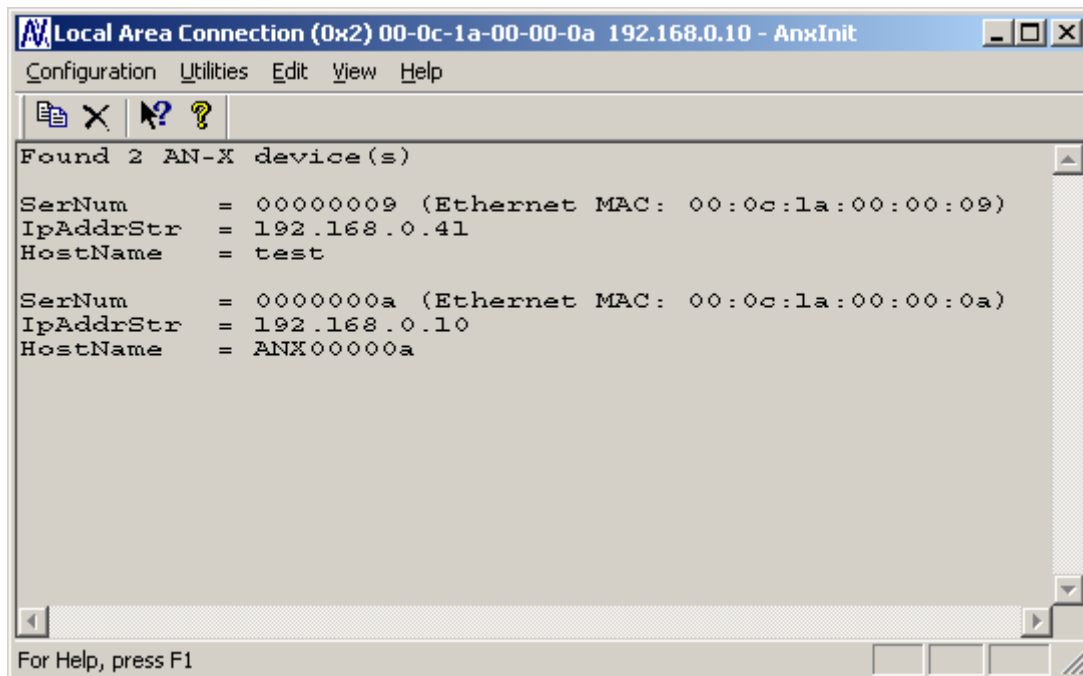

Selecting an AN-X

Before you can perform an operation on an AN-X, you must select it. Choose *Utilities/Select An AN-X* to select a specific AN-X.

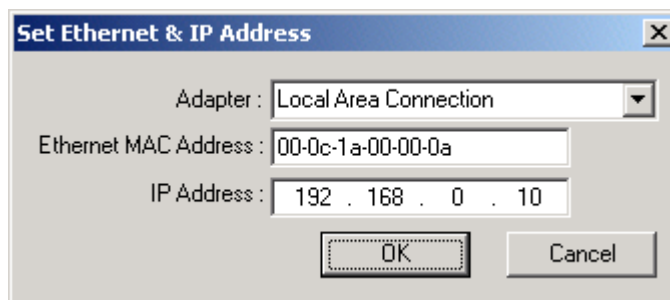

From the Adapter list, select the network adapter that connects to the Ethernet network that contains the AN-X.

In the *Ethernet MAC Address* field, enter the MAC Address of the AN-X you wish to select. It can be found on the AN-X label or using the *Locate All AN-X Modules* command. The format is as shown above, six pairs of hexadecimal digits separated by hyphens.

In the *IP Address* field, enter the Ethernet IP address of the AN-X you wish to select. It can be found using the *Locate All AN-X Modules* command. The format is as shown above, four decimal numbers each in the range 0 to 255.

Both MAC address and IP address must match the settings on the AN-X in order for communication to occur.

Click OK to select the AN-X.

The title bar of AnxInit shows the MAC Address and IP Address of the currently selected AN-X.

Set AN-X IP Configuration

Utilities/AN-X IP Configuration sets the AN-X IP address and hostname.

The AN-X must be on the local Ethernet to set its IP address.

First select the AN-X using the *Utilities/Select An AN-X command*.

Next select *Utilities/AN-X IP Configuration*. The *AN-X TCP/IP Configuration* dialog appears.

Enter a *Host Name* for the AN-X. This name is used internally by AN-X and may be used to identify the AN-X if you have a DNS server on your network. The name can be from 1 to 31 characters long.

To configure the AN-X to obtain its IP address from a DHCP server on the network, select *Obtain an IP address automatically (DHCP)*

To configure the AN-X to use a static IP address, select *Use the following Settings* and enter the following:

- the desired IP address for the AN-X.
- the Subnet mask for the AN-X
- the default gateway for your network.

You must enter a valid default gateway address even if there is no device at the gateway address on the network.

Click OK to complete the configuration.



Utilities/AN-X IP Configuration resets the selected AN-X. Use the *Utilities/Restart AN-X* to restart the AN-X in production mode.

If you Cancel the *Utilities/AN-X IP Configuration* command, AN-X is left running the boot code. Use the *Utilities/Restart AN-X* command to restart the AN-X.

Restart an AN-X

Use the *Utilities/Restart AN-X* command to restart the currently selected AN-X.

AN-X Info

The *Utilities/AN-X Info* command provides information about the currently selected AN-X in the log window.

The information shown:

AN-X Info	Ethernet MAC address
SerNum	Serial number
DaughterID	Daughterboard ID, 3 for AN-X-AB-DHRIO
BootRev	Boot code version
ConfigRev	Configuration kernel version
ProdRev	Production kernel version
HwRev	Hardware version
FirmwRev	Firmware release version (depends on current operating mode)
Status	see below
VendorId	Vendor ID
ProdId	Product ID
IpAddrStr	IP address assigned using Utilities/AN-X IP Configuration
HostName	name assigned using Utilities/AN-X IP Configuration

In boot mode, FirmwRev, Vendor ID and Product ID and not valid, and IpAddrStr and HostName are not shown.




Possible status values are:

Value	Meaning
1	Boot mode
2	Configuration mode
4	Production mode

Read Kernel Parameters

The *Utilities/Read Kernel Parameters* command displays various communications parameters for the currently selected AN-X

This command resets the AN-X. You will be warned and given the opportunity to cancel the command.

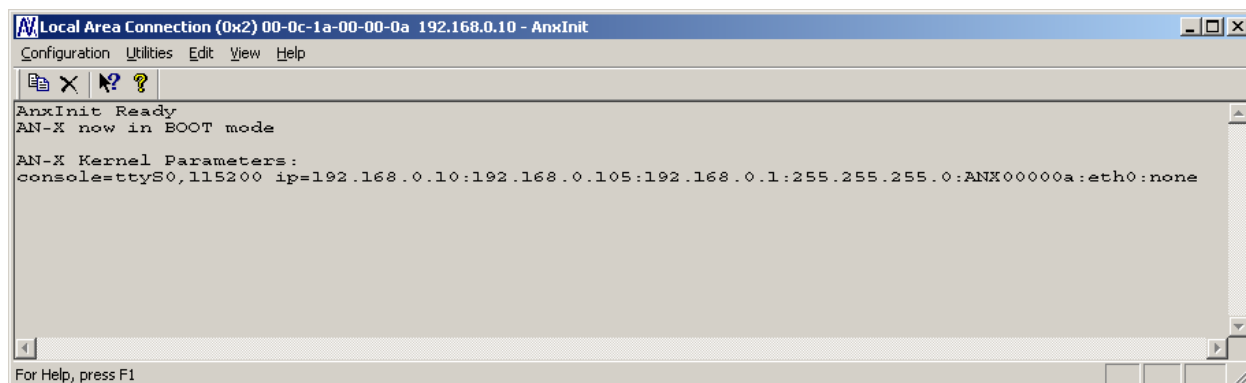

```

Local Area Connection (0x2) 00-0c-1a-00-00-0a 192.168.0.10 - AnxInit
Configuration Utilities Edit View Help
AnxInit Ready
AN-X now in BOOT mode

AN-X Kernel Parameters:
console=ttyS0,115200 ip=192.168.0.10:192.168.0.105:192.168.0.1:255.255.255.0:ANX00000a:eth0:none
  
```

The *Utilities/Read Kernel Parameters* command leaves the AN-X running the boot code. Use the *Utilities/Restart AN-X* command to restart the AN-X in production mode.

Run Config Mode

The *Utilities/Run Config Mode* command is used to restart the currently selected AN-X in configuration mode (normally used internally for updating firmware).

This command is not used in normal operation but may be required for technical support.

The AN-X is in configuration mode when the SYS LED flashes red twice, followed by a pause.

To exit configuration mode, use the *Utilities/Restart AN-X* command to restart AN-X in production mode.

Update AN-X Flash


The *Utilities/Update AN-X Flash* command updates the low-level firmware (boot code, configuration kernel, production kernel).

Files have extension qtf.



This command resets the AN-X. You will receive a warning and be given the opportunity to Cancel the command.

If you cancel at the filename dialog, the AN-X has already been reset and is in boot mode. Use the *Utilities/Restart AN-X* command to restart it in production mode.

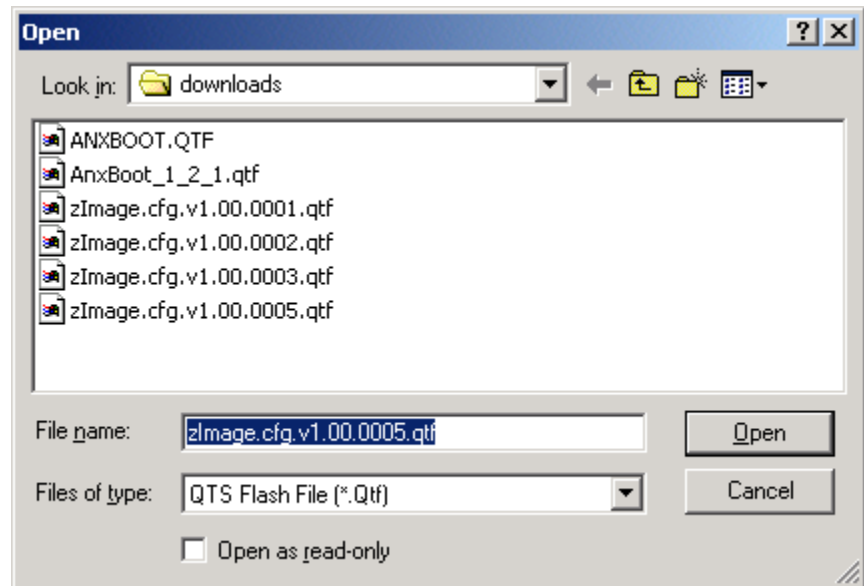

Update Firmware

There are two ways to update all the firmware in an AN-X module.

1. The *Configuration/Firmware Update* command starts the firmware update wizard, which takes you step by step through the firmware update process.
2. The *Utilities/Update Firmware* command updates all the firmware on an AN-X you have selected using the *Utilities/Select An AN-X* command.

Firmware files have extension *bin*.

Firmware Update Wizard

Select the *Configuration/Firmware Update* command to start the firmware update wizard.

Step 1:

In step 1, you identify the AN-X you are configuring.



Step 1: AN-X Selection

Select this computer's Ethernet adapter that's on the same Ethernet subnet as the AN-X module you want to configure (you may only have one Ethernet adapter in your computer)

Local Area Connection

Enter the Ethernet MAC Address of the AN-X module you want to configure. You can get this from the label on the AN-X module or by selecting Utilities/Locate All AN-X Modules (if the module's current IP address is on the same subnet).

00-0c-1a-00-00-09

Enter the IP address on the local subnet that you intend the AN-X module to use.

192 . 168 . 0 . 9

Next >> Exit

1. Select the Ethernet adapter that's connected to the AN-X. In most cases there will be just one Ethernet adapter in the computer. The AN-X must be on the same subnet as the computer.


2. Enter the MAC address of the AN-X you are updating. This is printed on the AN-X label. It consists of six pairs of hexadecimal digits, separated by hyphens. In the example above, it's 00-0c-1a-00-00-09.

If the AN-X is already online, you can obtain its MAC address using the *Utilities/Locate All AN-X Modules* command.

3. Enter the IP address of the AN-X you want to update

Step 2

In step 2, you choose a method of restarting AN-X to put it in config mode.

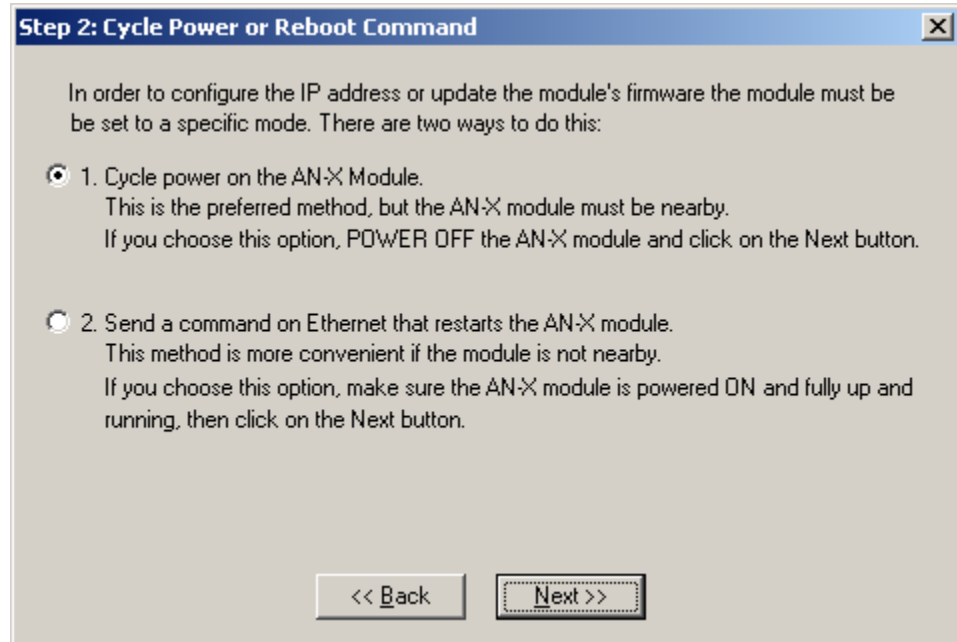


The preferred method is to cycle power on the AN-X. Select the first option on the screen and click the *Next >>* button.

The second method, useful if the AN-X is not easily accessible, is to send it a command over Ethernet. The AN-X must be powered on and completely running for this method to work. For example, if this is the first time you are configuring a new AN-X, allow sufficient time for it to acquire an IP address from a DHCP server or to time out and use its default IP address (about 3 minutes). Select the second option on the screen and click the *Next >>* button.


Step 3:

Wait for AN-X to enter config mode. While AnxInit is waiting, the *Next>>* button will be disabled. When AN-X is in boot mode, the *Next>>* button will be enabled.

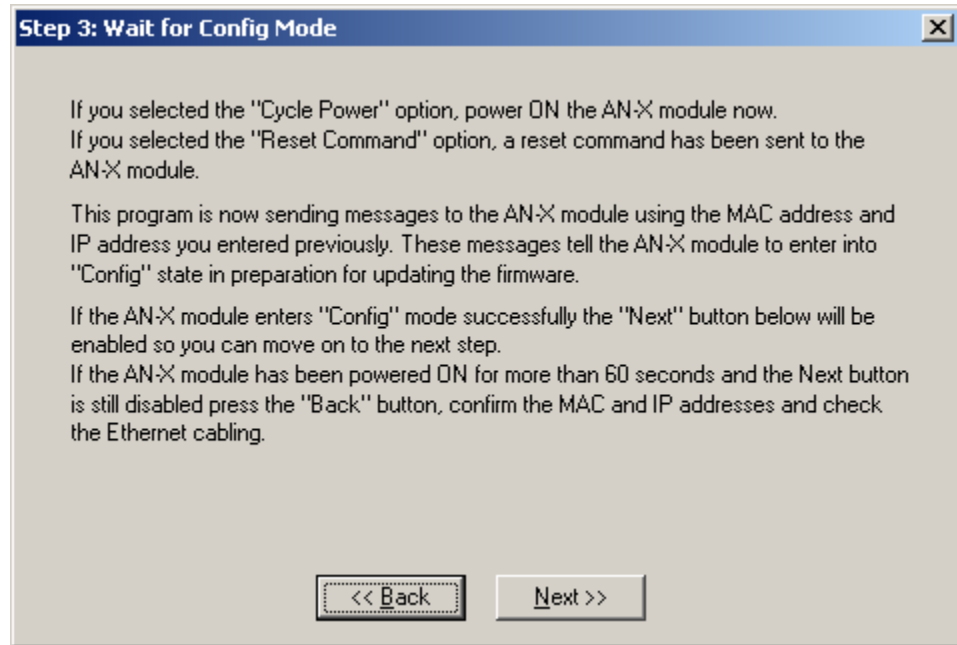

If the AN-X does not enter config mode within about 60 seconds, return to the previous screens and check the entries.

Click the *Next>>* button, and select the firmware file you want to download and click *Open*.

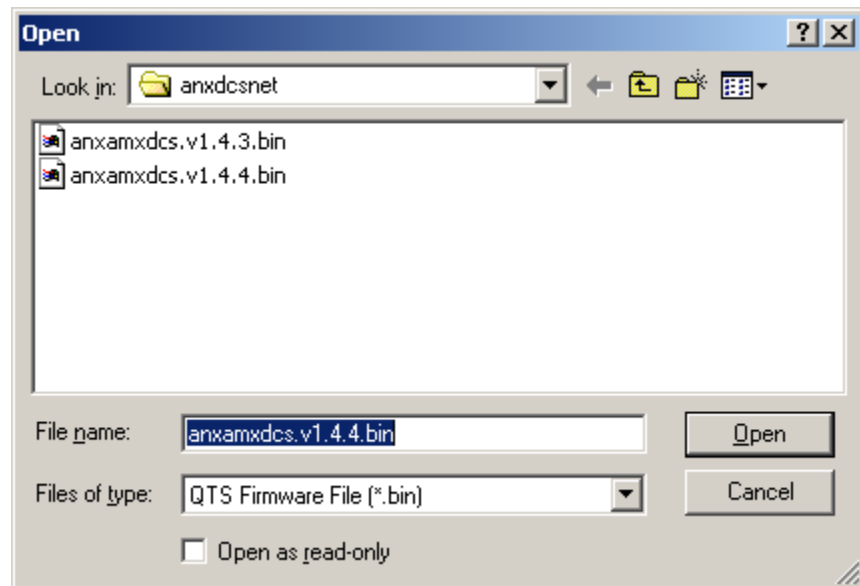

AnxInit transfers the firmware file and restarts the AN-X.

After you run update the firmware, you must reconfigure the AN-X and restore the Data Highway Plus station number and baud rate


Update Firmware Command

The *Utilities/Update Firmware* command updates all the firmware on an AN-X you have previously selected using the *Utilities/Select An AN-X* command.

This command resets the AN-X. You will receive a warning and be given the opportunity to Cancel the command.

If you cancel at the filename dialog, the AN-X has already been reset and is in configuration mode. Use the *Utilities/Restart AN-X* command to restart it in production mode.

Click the *Next>>* button, and select the firmware file you want to download and click *Open*.

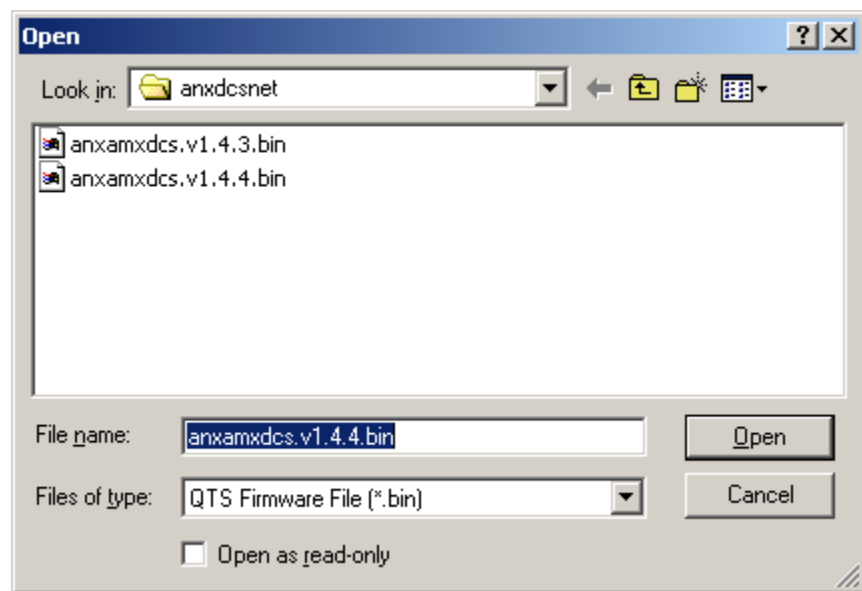

AnxInit transfers the firmware file and restarts the AN-X.


After you run update the firmware, you must reconfigure the AN-X and restore the Data Highway Plus station number and baud rate.

Patch Firmware

The *Utilities/Patch Firmware* command applies small patches to the firmware running on the AN-X.

These patch files have extension *pch*.



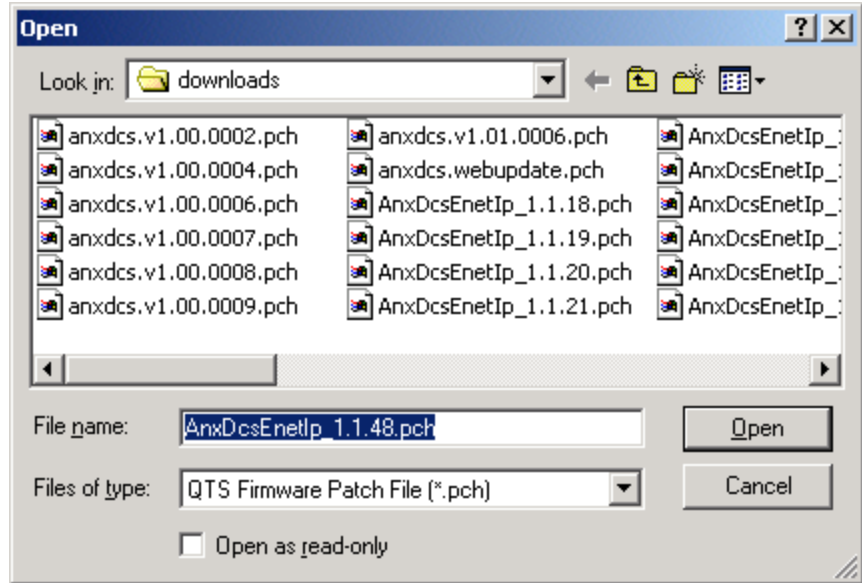

This command resets the AN-X. You will receive a warning and be given the opportunity to Cancel the command.

You do not have to reconfigure the AN-X after applying a patch. All configuration information will be left intact.

When the patch has been applied, AnxInit restarts the AN-X in production mode.

If you cancel at the filename dialog, the AN-X has already been reset and is in configuration mode. Use the *Utilities/Restart AN-X* command to restart it in production mode.

Using the Web Interface


The AN-X module contains a webserver capable of communicating with standard web browsers such as Internet Explorer.

Use the web interface to:

- set the Data Highway Plus station number and baud rate
- monitor Data Highway Plus diagnostic counters
- view AN-X logs

To use the web interface, you need to know the IP address of the AN-X. Use the *Utilities/Locate All AN-X Modules* command in AnxInit to find all AN-X modules on the Ethernet network.

To access the web interface, start your web browser and type the AN-X IP address where you normally enter web addresses in the browser.

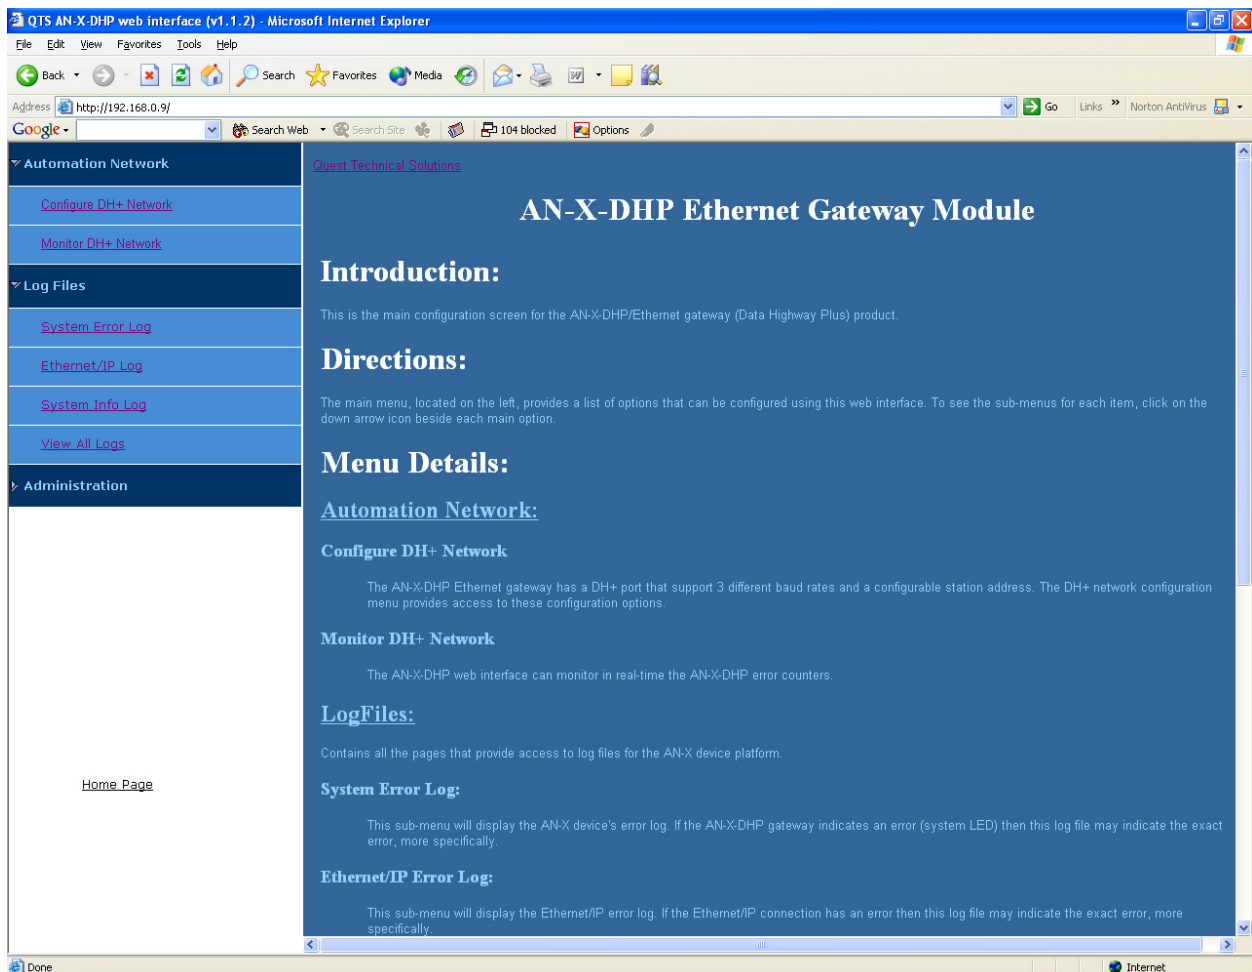

The left pane contains commands. Click on the arrows at the left of the main headings to expand or contract the sections.

The contents of the right pane depend on the current command being executed.




A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Data Highway Plus Configuration

Select *Automation Network/Configure DH+ Network* to set the station number and baud rate.

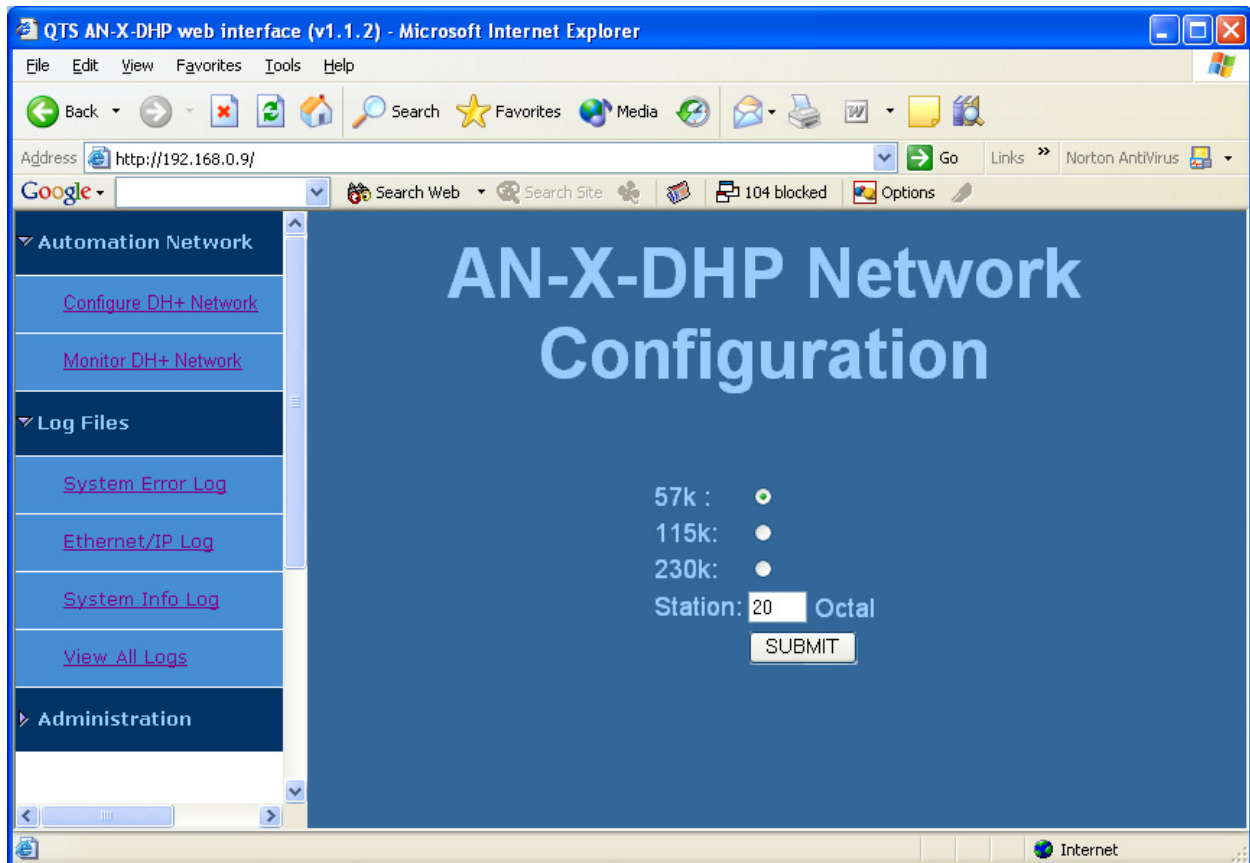

Select the baud rate.

Enter the station number in the Station field. It can range from 0 to 77 octal. 0 is not recommended as a Data Highway Plus station number.

The default AN-X configuration is station 20 octal, baud rate 57.6 Kbaud.

Click the SUBMIT button to send the values to AN-X.

Log Files

AN-X maintains various logs to record diagnostic and error messages. Use the Log Files menu in the web interface to view these logs.

System Error Log

The System Error log records errors that occur during AN-X operation. This log is normally empty.

Ethernet/IP Log

The Ethernet/IP log shows messages and errors associated with Data Highway Plus operation.

System Info Log

The System Info Log records informational messages during startup and normal operation.

View All Logs

Use View All Logs to list and view all the AN-X logs. To view a log file, double click on the file name.

Administration Menu

The Administration Menu is used to view and edit files on AN-X. It is password protected and is used only for AN-X technical support.



Troubleshooting

LEDs

The AN-X-AB-DHRIO (DH+) has LEDs that indicate the state of the Ethernet connection, the connection to Data Highway Plus, and the overall module state.

Ethernet LEDs

There are two LEDs that indicate the state of the Ethernet connection.

The orange LED, labelled 100, is on if the link is running at 100 Mbits/second and is off otherwise.

The green Link/Act LED is off if the link is inactive and is on if the link is active. If activity is detected, the link blinks at 30 ms intervals and continues blinking as long as activity is present.

SYS LED

The SYS LED is used by the AN-X operating system and software to indicate the state of operations and errors.

It should be used in conjunction with the logs to locate the cause of problems.

In the following, red 3 means three red flashes followed by a pause, and so on.

SYS LED State	Possible cause
Red 2	AN-X is in config mode
Red 3	DHCP configuration failed
Red 4	Fatal application error, check logs for cause
Red 5	Application memory access violation, check logs
Red 6	Application failed, illegal instruction, check logs
Red 7	Application crashed, unknown cause, check logs
Fast red flash	Reconfiguration (set station number and baud rate) failed
Single red flash	Unscheduled messaging, addressing or connection problem
Slow red flash	script or application problem during startup

At startup, the SYS LED sequence is:

- boot code starts – fast flashing red



- boot code loads a kernel – solid red
- if the configuration kernel is loaded, 2 red flashes followed by a pause
- if the production kernel loads with no errors, solid green

NET LED – Network Status

The NET LED indicates the status of the Data Highway Plus network connection.

All stations operating correctly	Solid green
No other stations	Yellow
Network error	Flashes red

Data Highway Plus Diagnostic Counters

AN-X maintains Data Highway Plus diagnostic counters. Use *Automation Network/Monitor DH+ Network* in the web interface to view the diagnostic counters.

The counters are:

Counter	Description
Solicit ACK Bad	Solicit ACK bad (not to AN-X, bad ACK value, or source is not the station AN-X solicited)
Transmit retries exhausted	AN-X retries messages up to 3 times (4 in total). If it still hasn't successfully sent the message, it discards the message and returns an error.
Bad LSAP NAKs received	AN-X sent a message and got a bad LSAP NAK in response. Usually caused by routing problems.
Received ACK/NAK too short	AN-X was waiting for an ACK and received a frame that was less than 3 characters long instead.
Token pass timeout	AN-X passed the token but there was no response from the destination in the timeout period. AN-X retries the token pass up to 3 times.
Token claim sequence entered	AN-X increments this counter when there is no network activity (no token passing, etc.). It then starts soliciting for stations to pass the token to.
Bad CRC on received frame	AN-X received a frame with a bad CRC. Usually caused by cabling and termination.
Bad LSAP NAKs sent	AN-X uses this counter as a noise counter. If it detects a carrier on the network and then the carrier disappears before a



Counter	Description
	frame starts, it increments this counter.
Received frame too small	AN-X received a frame smaller than the minimum possible size.
Retry of a frame received	AN-X received a frame with the same transaction number as a previous frame. It discards the duplicate frame.
Messages successfully sent	AN-X increments this counter when it sends a message (command or reply) successfully. It also increments the commands successfully sent or replies successfully sent counter.
Commands successfully sent	AN-X increments this counter when it successfully sends a command to another station.
Commands successfully received	AN-X increments this counter when it receives a command from another station.
Reply could not be sent	AN-X increments this counter when it receives a command but could not deliver the reply.
ACK timeout	AN-X was expecting an ACK in response to a message but nothing was received in the timeout period. Sometimes caused by sending messages to stations that do not exist.
Illegal protocol NAKs received	AN-X sent a message and got an illegal protocol NAK in response.
No memory NAK received	AN-X sent a message and got a no memory NAK in response.
Received ACK/NAK too long	AN-X was expecting an ACK and received a frame that was longer than 3 characters instead.
Token pass retries exhausted	AN-X retries the token pass up to 3 times. If it still fails, it increments this counter, removes the destination from its active station list, and tries to pass the token to its successor.
Token claimed	Not used.
Illegal protocol NAKs sent	If AN-X receives a message that is shorter than the minimum length (6 characters), it increments this counter and sends an illegal protocol NAK to the sender.
No memory NAKs sent	If AN-X receives a message and is out of buffer space, it increments this counter and sends a no memory NAK to the sender.
Received frame too large	AN-X received a frame that was larger than the maximum possible size (308 bytes, including the 2 CRC bytes).
Receive frame aborted	AN-X increments this counter when it receives a message that doesn't finish, either because the source aborted the message or because the source went offline.
Messages successfully received	AN-X increments this counter when it receives a message



Counter	Description
	(command or reply). It also increments the commands successfully received or replies successfully received counter.
Replies successfully received	AN-X increments this counter when it receives a reply to a command it sent to another station.
Replies successfully sent	AN-X increments this counter when it successfully sends a reply to another station.

Counters roll over when they reach their maximum value.

The diagnostic counters are cleared when you reconfigure the Data Highway Plus network parameters on AN-X.



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Updating the Firmware

The AN-X operating software consists of several parts:

- boot code, runs at startup
- configuration kernel, runs when you update firmware
- production kernel, runs in normal operation
- application software, for Data Highway Plus communication and unscheduled messaging

The boot code and kernels are supplied in file with extension *qtf* and are updated using the AnxInit utility. Run the command *Utilities/Update AN-X Flash* and select the file you wish to download. Refer to page 26 for details.

Firmware files contain the application programs for AN-X and have extension *bin*. They are downloaded using the command *Configuration/Firmware Update* or *Utilities/Update Firmware* in AnxInit. Refer to page 27 for details.

Occasionally individual patch files are released. They have extension *pch* and are downloaded using the *Utilities/Patch Firmware* command in AnxInit. Refer to page 31 for details.

Reading Version Numbers

To read the version numbers of the various software components:

Boot code	AnxInit – AN-X Info
Configuration kernel	AnxInit – AN-X Info
Production kernel	AnxInit – AN-X Info
Firmware	AnxInit – AN-X Info (version depends on current mode, boot, configuration or production)
Individual applications	
	Web interface, System Info Log
Unscheduled messaging	Web interface, Ethernet/IP Log



Specifications

Parameter	Specification
Function	Bridge between Ethernet and Data Highway Plus network
Typical Power Consumption	300 mA @ 12 VDC or 150 mA @ 24 VDC
Maximum Power dissipation	3.6W
Environmental Conditions:	
Operational Temperature	0-50 °C (32-122°F)
Storage Temperature	-40 to 85 °C (-40 to 185°F)
Relative Humidity	5-95% without condensation



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Support

How to Contact Us: Sales and Support

Sales and Technical Support for this product are provided by ProSoft Technology. Contact our worldwide Sales or Technical Support teams directly by phone or email:

Asia Pacific

[+603.7724.2080](tel:+603.7724.2080), asiapc@prosoft-technology.com

Europe – Middle East – Africa

[+33 \(0\) 5.34.36.87.20](tel:+33(0)5.34.36.87.20), Europe@prosoft-technology.com

North America

[+1.661.716.5100](tel:+1.661.716.5100), support@prosoft-technology.com

Latin America (Sales only)

[+1.281.298.9109](tel:+1.281.298.9109), latinam@prosoft-technology.com.



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Warranty

Quest Technical Solutions warrants its products to be free from defects in workmanship or material under normal use and service for three years after date of shipment. Quest Technical Solutions will repair or replace without charge any equipment found to be defective during the warranty period. Final determination of the nature and responsibility for defective or damaged equipment will be made by Quest Technical Solutions personnel.

All warranties hereunder are contingent upon proper use in the application for which the product was intended and do not cover products which have been modified or repaired without Quest Technical Solutions approval or which have been subjected to accident, improper maintenance, installation or application, or on which original identification marks have been removed or altered. This Limited Warranty also will not apply to interconnecting cables or wires, consumables nor to any damage resulting from battery leakage.

In all cases Quest Technical Solutions' responsibility and liability under this warranty shall be limited to the cost of the equipment. The purchaser must obtain shipping instructions for the prepaid return of any item under this Warranty provision and compliance with such instruction shall be a condition of this warranty.

Except for the express warranty stated above Quest Technical Solutions disclaims all warranties with regard to the products sold hereunder including all implied warranties of merchantability and fitness and the express warranties stated herein are in lieu of all obligations or liabilities on the part of Quest Technical Solutions for damages including, but not limited to, consequential damages arising out of/or in connection with the use or performance of the Product.



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com

